


FRENCH DOOR

INSTALLATION MANUAL

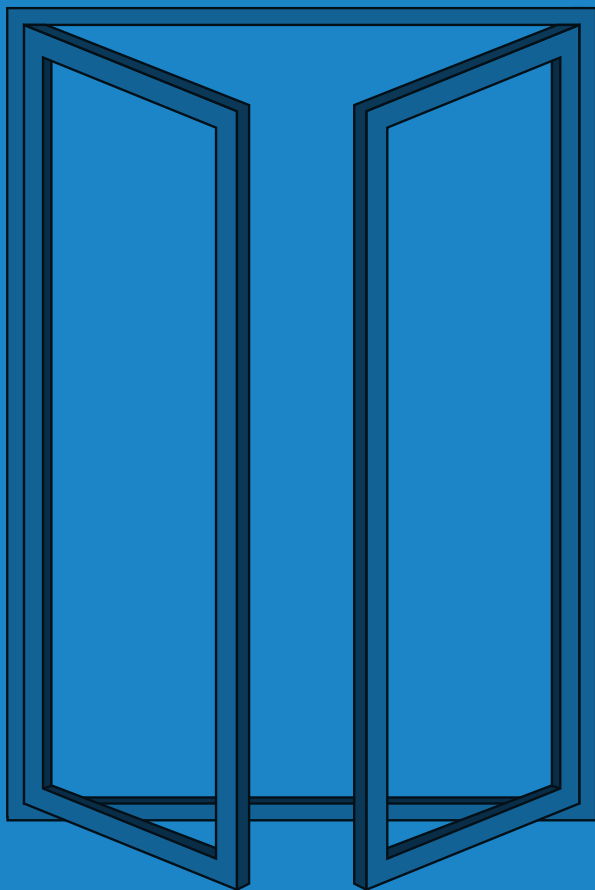

CONTENT

1. GENERAL INSTALLATION INSTRUCTIONS	4
2. RECOMMENDED TOOL LIST	5
3. SITE SURVEY	6
• Opening inspection	6
• Internal finished floor level and datum line position	6
• Aperture height inspection using datum line	7
4. SUB SILL INSTALLATION	8
5. FRAME ASSEMBLY AND INSTALLATION	9
• Outer frame assembly	9
• Low threshold assembly	10
• Outer frame installation	11
7. DOOR LEAF INSTALLATION	12
• General installation recommendations	12
• Panel No.1 installation	12
• Panel No.2 installation	13
8. GLAZING INSTRUCTIONS	14
9. OPERATION CHECKING AND ADJUSTMENT	15
• Door unit operation inspection	15
• Overall gap size inspection	15
• Securing hinges with final fixing screws	16
• Weather seal application	16
10. FINISHING TOUCHES	16
11. OPERATION AND MAINTENANCE	17
Opening and closing operation for french door	17

1. GENERAL INSTALLATION INSTRUCTIONS

1. ASSEMBLY INSTRUCTIONS

IMPORTANT. Read these assembly instructions before beginning any installation work. Install as recommended otherwise the door unit may not function properly and any warranty, written or implied, will be void.

2. QUALIFICATIONS

The assembly instructions are only for the attention of qualified installers who are trained and qualified in window and doors installation techniques, and are aware of the manufacturer's recommendations for the system used.

3. TRANSPORT AND STORAGE

Parts that could come lose during transportation can be damaged or cause accidents. All packaging opened to allow the goods to be inspected must be closed and properly sealed for further transport. Any goods that will be further transported must be loaded safely and securely.

4. INCOMING GOODS

All goods received must be inspected for any transport damage prior to being removed from the vehicle. The goods received must match the delivery note. Any wet packaging may cause damage to the goods, and therefore must be removed immediately.

5. SITE SURVEY

It is important to check the conditions on site before starting the assembly.

- Check for any apparent defects and deficiencies around the structural opening. If any defects are found, then the customer must be notified, and agreement reached as to who is responsible for rectifying these defects prior to the new window/door installation.
- Check structural conditions such as the wall construction, the load capacity or adhesiveness of the edges for adhesive sealing systems, evenness, building moisture, a possibility for load transfer and mounting, constructional tolerances and height reference points.
- Check for contractual agreements, supplied assembly detail, planning guidelines, heat protection, humidity proofing, and interferences to other assembly sections.



ATTENTION! The fixing materials are not part of the scope of supply. The installer must decide on which fixing materials to use after assessing the given substructure. If any supplied fixing materials are used, Debar do not accept liability for the correct assembly. The installer must ensure that the fixing materials are suitable for the respective substructure and that assembly is completed correctly.

6. HANDOVER

All operating, assembly and adjustment instructions as well as maintenance and care guidelines must be delivered to the user when briefing them. It is essential to train the user on the function of the supplied product and provide instruction on the directions for safety and use. Incorrect operation or failure to observe the instructions may lead to damage and accidents. The customer must store the instructions carefully and hand them over to the new owner in the event of sale.

2. RECOMMENDED TOOLS

Appropriate fixings into structural opening.

Mixed selection of frame packers.

Mixed selection of glazing packers.

Rubber mallet or plastic mallet

Set of HSS drill bits.

Drill / SDS hammer drill.

Saw for cutting aluminium sill.

Long spirit level

String line

Tape measure

No.2 Pozi drive

2.5mm; 3mm; 4mm Allen keys.

Level or Laser Level

Gloves

Vacuum Cups

Caulk Gun and Low modulus Silicone

Paper Towels

Utility Knife

Silicone and gun.

Set Square.


Tressels x4

3. SITE SURVEY

Opening Inspection

- The aperture for the new doors must be flat, level, straight, plumb and square at every single side. There should be a solid structure to fix the frame.
- The aperture load bearings must not be transferred to any part of the frame when fitted.
- Prepare the aperture by making sure it is clean.
- Remove any old silicone and brush down the threshold.
- The internal and external reveal sizes should be checked and any variations must be determined to ensure enough opening light for the area where doors will fold and will not be obstructed by plaster, tiles or etc.
- Check the aperture's height, width and diagonals to ensure the opening is equal on all sides and square.
- Generally three measurements should be taken.


NOTE: The smallest measurement of width and height used to determine manufacturing sizes. See Also Section "Aperture height using laser level."

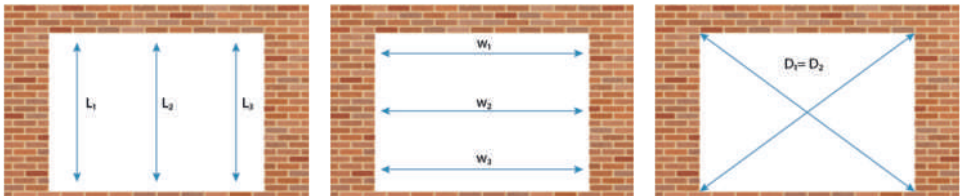

- Use tape measure to verify the aperture overall height and width. At least three measurements must be taken.
- Smallest height and width measurement will determine the overall frame manufacturing size.
- By measuring the diagonals verify the aperture is square.


Internal finished floor level and datum line position

- Select a point within the agreed/existing structure finished floor level from where the builder can after determine the internal floor level i.e. tiles, carpet, timber.
- Using laser measure set a datum line at 1000mm from the existing finished floor level.
- Take into account the agreed internal floor finish i.e. tiles, carpet, timber.
- Mark the datum line on each jamb of the aperture.
- Refer to the factory drawing and specify which threshold profile or sub-sill is required.
- Check if the existing threshold needs to be lowered taking into account if the internal edge of the aluminium threshold sits flush, or is set at a certain height with the new internal finished floor level.

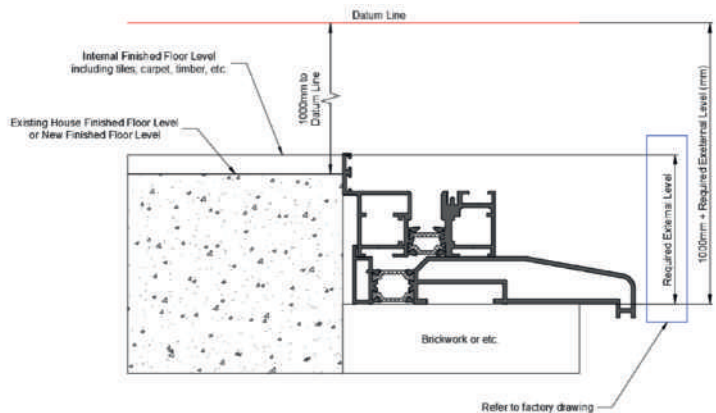

Aperture height inspection using datum line

- From the laser datum line measure the distance to the threshold at left, centre and right positions where new bi-fold door will sit on.
- Each of the bottom measurements should be uniform. If not then the threshold is not level and structure should be leveled.
- From the original datum line position (set at 1000mm) measure the distance to the top underside of the aperture at left, centre and right positions.
- Each of the top measurements should be uniform. If not then aperture at the top is not level and the adjustment to the manufacturing height of the frame must be made.

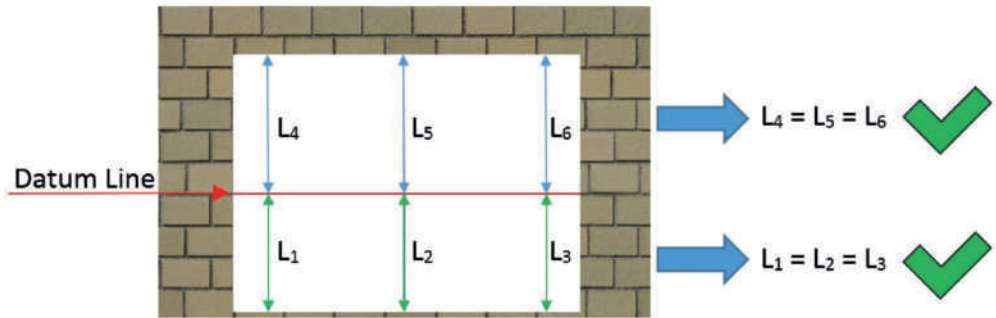

Manufacturing sizes

Allow the aperture to be 10-15 mm wider and 10-15 mm higher than the overall frame size of the ordered unit. It is important that the opening size for new frame is correct.



NOTE: Overall height of new unit is measured from the bottom of the sill and not from the finished floor.

4. SUB SILL INSTALLATION




- The need for any sub-sill should be determined at the beginning of the project.
- The size of the sub-sill should be as such that there is an overhang of at least 25 mm from the face of the building.
- The installer should determine how the sub-sill should be fitted, taking into account features such as horns.

NOTE: Check the sill for drainage slots, make sure they are clean and not blocked by any debris, clean if necessary.



- Using low modulus silicone seal the ends of the sill section.
- Install the end caps (ref DBA1-203N) as shown below.

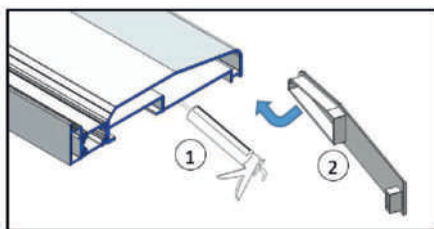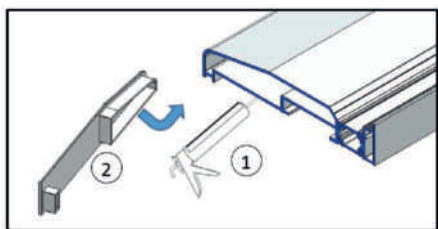

- Place the sub-sill on to the aperture.
- Use a spirit/laser level or a string line to assess the level of the sub-sill.
- Temporarily place the required packers under the sill, check the level and adjust if necessary

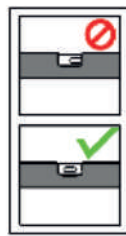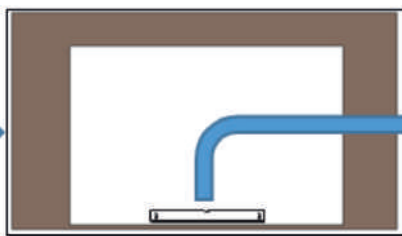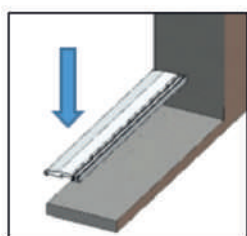


- Use specified fixings to fix the sill through the thermal break at minimum 150mm from each end, and spacing every 500mm centres.
- Fill each fixing hole with low modulus silicone before inserting the fixing.
- Double check for level and adjust if necessary.

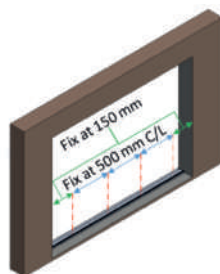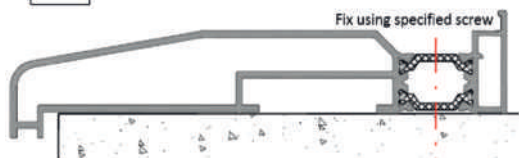

5. FRAME ASSEMBLY AND INSTALLATION


Outer frame assembly

- Apply low modulus silicone at all outer frame connection joints and between the frame components.

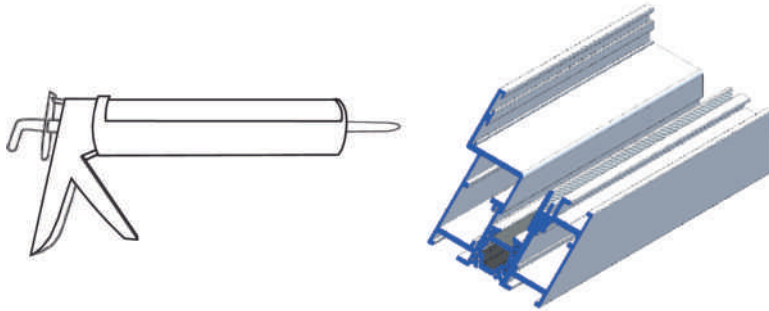


- Connect the outer frame corners using outer cleats and M6x16 machine screws as shown below.
- Align the frame by adjusting the screws, if necessary.
- Any silicone excess should be wiped off at this stage.

TOOL REQUIREMENT: - 4mm Allen key is required.

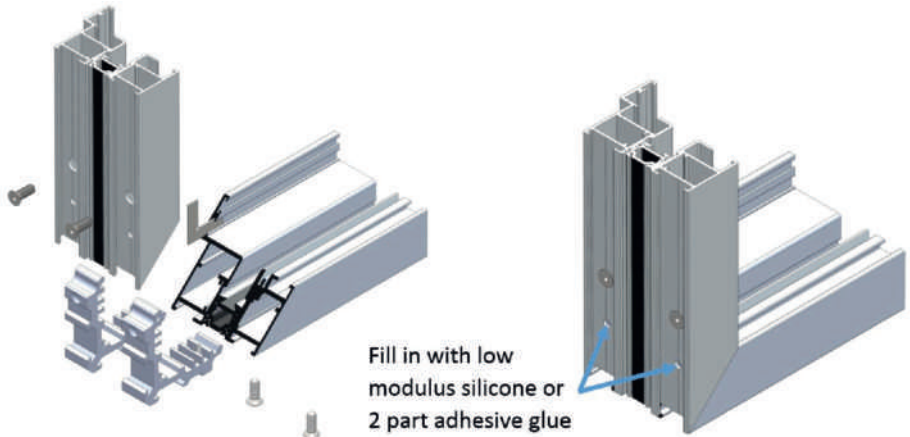


- Repeat same process to all four outer frame corners.

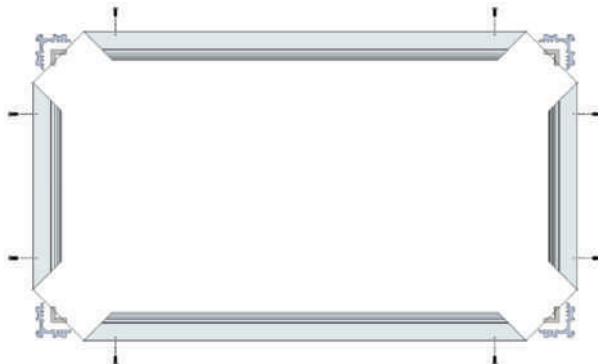

Low threshold assembly

- Apply low modulus silicone to all frame connection joints and between the frame components.
- Use low threshold fixing kit (ref. DBA1-105) to join the corner as shown below.

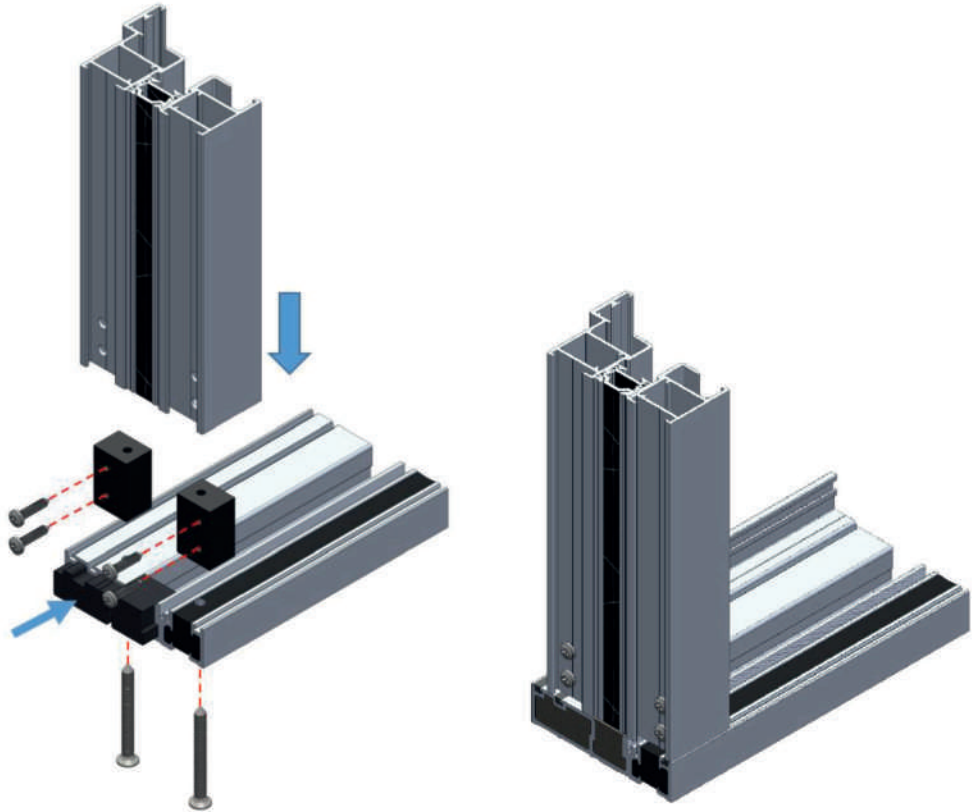


- Align the frame by adjusting the screws, if necessary.
- Any silicone excess should be wiped off at this stage.
- Ensure no water can escape from the low threshold past the jambs.



Outer frame installation

- Insert the frame into prepared structural opening and pack as necessary to ensure that the frame is held plumb and square inside the opening.


NOTE: If sub-sill installed. Run a silicone bead along the sub-sill rebate to ensure weather tight joint.

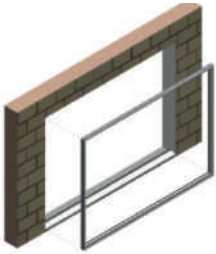

- Pack out all fixing points to ensure tight and supported fixings.
- Secure frame using suitable fixing screws and plugs.
 - A = Anchor distance from corner of frame approximately 150mm.
 - B = Anchor spacing generally at maximum 500 mm.
- Ensure the top and bottom frame remain plumb and square over the complete length.

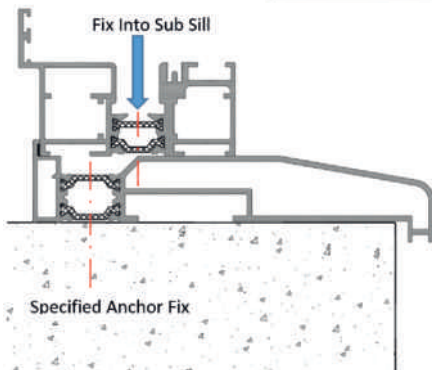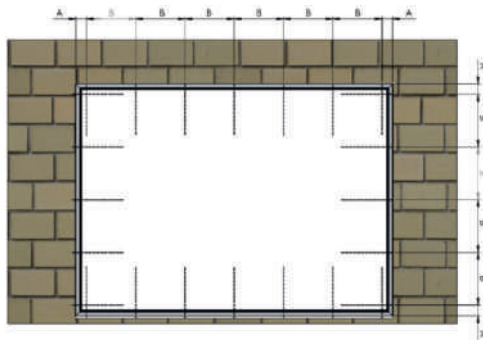

Typical outer frame installation with sub-sill

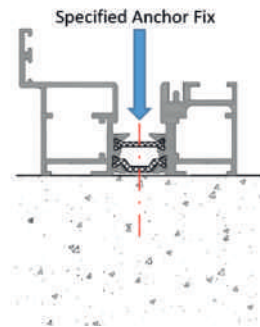

Typical outer frame installation

- Check the level and make sure that the frame is set plumb and square.
- Using low modulus silicone ensure that the perimeter is sealed against water penetration at both inside and outside of the opening.
- Clean away all debris from bottom rail, especially guide channel.

7. DOOR LEAF INSTALLATION

General installation recommendations

- Before installing any door panels check for all the components. Make sure there is no missing components.
- Look for the panel glass beads to determine the interior side.
- Look for the panel drainage holes to determine the bottom side.
- All panels are numbered and must be installed with accordance to the factory drawing.

Panel No.1 Installation

- Align the side of panel No.1 that has clamping plates on with hinges attached to outer frame.



- Locate the hinge leaf over the clamping plate and secure with M5x10mm machine screws using top and bottom countersunk hinge holes.


TOOL REQUIREMENT: - 3mm Allen key is required.

NOTE: Do not use 4.2x25mm self drilling screws at this point.



Panel No.2 Installation

- Align the side of panel No.2 that has clamping plates on with hinges attached to outer frame.

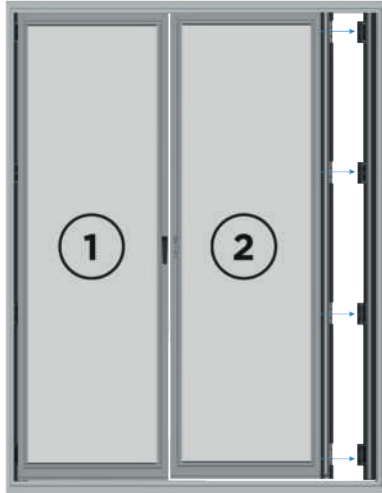

- Locate the hinge leaf over the clamping plate and secure with M5x10mm machine screws using top and bottom countersunk hinge holes.

TOOL REQUIREMENT: - 3mm Allen key is required.


NOTE: Do not use 4x25mm self drilling screws at this point.




8. GLAZING INSTRUCTIONS

NOTE: All glazing should conform in the requirements of BS 6262. In addition any instructions given by glass manufacturers should be followed.

- Before glazing, lock all doors panels and fully engage the locks.
- Starting from the first panel hinged to the frame remove all beads, taking care to note where the beads are removed.

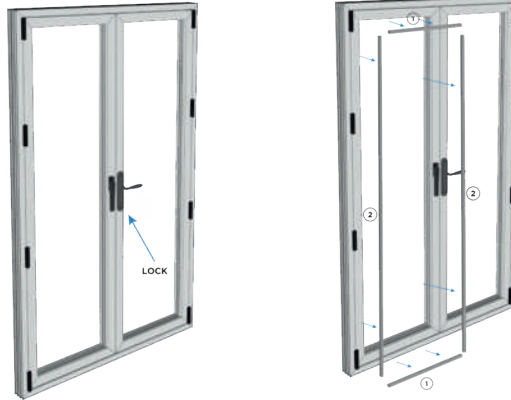

- Install the glass into the frame and pack it appropriately using various thickness of glass packers. Ensure to support inner and outer layers of the glass.
- All panels should be 'toe and heeled' to maintain equal and parallel gaps between outer frame and panel at the top and bottom.
- Add silicone between each vertical set of packers to help keep them in place. Make sure that all packers do not obstruct any of the drainage or decompression holes.

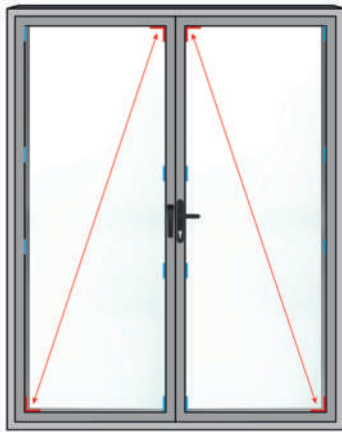


- 'Toe and Heel'. Load carrying packer must be used to keep panels square and level.
- Supporting packers to prevent movement and provide rigidity to panel. Should be installed between all hardware components

- Replace beading, starting with shortest pieces first and tapping into place with a plastic mallet.
- Replace wedge gaskets into position.
- Repeat the 'toe and heeling' process for all panels, ensuring that all door gaps are equal and parallel.
- Check door operation and adjust if necessary.

9. OPERATION CHECKING AND ADJUSTMENT

Door unit operation inspection

- Check the basic running operation of the doors to make sure the mechanisms are working properly.

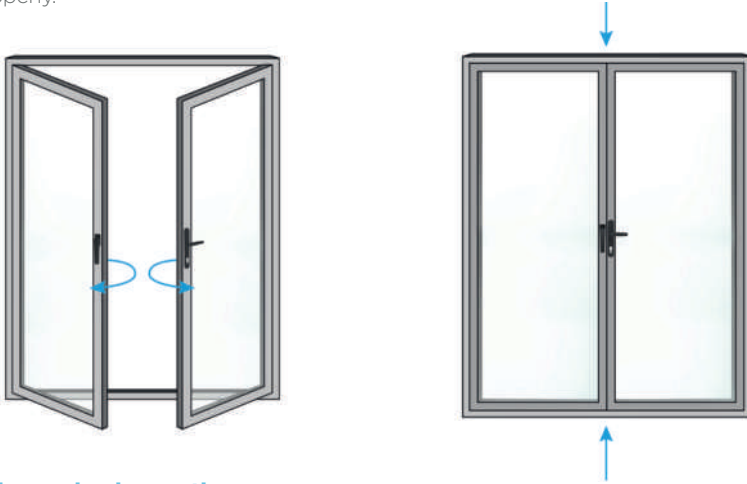


Overall gap size inspection

- Assess the horizontal gaps between the outer frame and sash at the top and bottom ensuring they are even and equal to 11mm.
- Assess the vertical gaps between the panel frames ensuring they are even and equal to 10mm.





Securing hinges with final fixing screws

- After completing all the installation and the doors are glazed and operate properly, ensure to secure all hinges with final fixing screws as shown below.

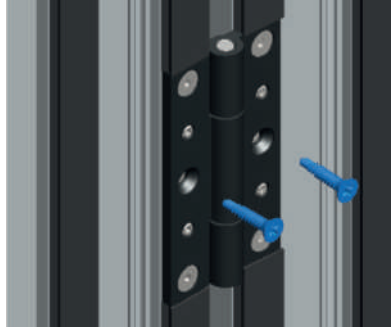

Weather seal application

- Apply missing or any removed weather seals on all panels. Ensure that the ribbed part of the seal would always be installed facing inner part of the profile.

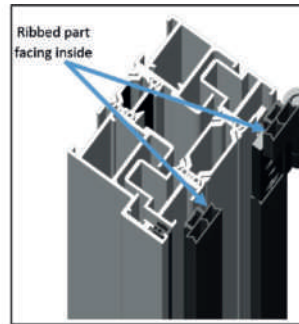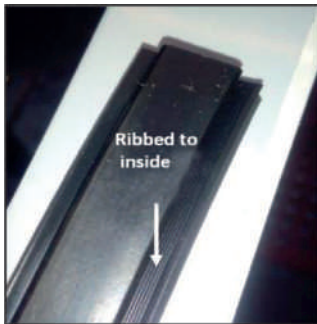

10. FINISHING TOUCHES

- Check that the handles and locking mechanisms operate smoothly on each door.
- Check the french doors action is smooth.
- Check that the lock operates correctly when closed.
- Check the hinges and ensure that there are no screws missing.
- Check the weather seal and ensure that the doors are fully sealed.
- Check the perimeter and ensure that the door unit is weather tight.
- Clean the bottom frame and ensure it is free of any debris.
- Ensure that the homeowner is instructed and knows exactly how to use and look after french door.

11. OPERATION AND MAINTENANCE

Opening and closing operation for french door.

To open doors

- Open the main traffic door.
- Release the shoot bolt locks on the second door

To close doors

- Secure the panel by locking with shoot bolt lock on the second door
- Close the main traffic door last, ensure that the shootbolt lock has been locked in the frame first on the second door.



+44 (0) 2033 555 311
info@glassopenings.co.uk | www.glassopenings.co.uk

